

PROTECTIVE BUTTERFLY MASK
WITH VALVE

Bela Flor

130X130X210mm

Bela Flor

PROTECTIVE BUTTERFLY MASK
WITH VALVE

Non Medical A6



30pcs

PPE-Regulation(EU)2016/425

EN 149: 2001+A1: 2009

Bela Flor

PROTECTIVE BUTTERFLY MASK
WITH VALVE

CE 0370

FFP2 NR

Indications For Use

The protective mask is intended used for protection against solid and oily particulates, liquid and microorganisms such as coal dust, cement dust etc. Single-use.

Limitations

- Not suitable for working places where open flames exist (such as welding, casting, etc.);
- It is not suitable for professional protective use such as oxygen deficient, toxic gas environment.
- No medical use.

Checks prior to use

Please check whether the packaging is damaged, whether the mask body is damaged, deformed or has other obvious defects before use.

Fitting

1. Keep the Nose bridge upward and use your hands extending the straps.
2. Place the respirator on your face to cover the nose, mouth and chin.
3. Place each straps around each ear and stretch to attach each straps at the back of the head.
4. Adjust the Nose bridge so to fit the respirator onto your face.
5. Adjust the buckle so to keep the respirator tight onto your face.

If transporting this product use original packaging provided

Bela Flor

PROTECTIVE BUTTERFLY MASK
WITH VALVE

Non Medical A6



30pcs

PPE-Regulation(EU)2016/425

EN 149: 2001+A1: 2009

Bela Flor

PROTECTIVE BUTTERFLY MASK
WITH VALVE

CE 0370

FFP2 NR

Use cautions:

- a) Please check fit of mask prior to use;
- b) It is unlikely that the requirements for leakage will be achieved if facial hair passes under the face seal;
- c) Please do not use the mask under low air quality condition, such as serious contaminants in air, oxygen deficiency;
- d) Do not use the mask in explosive atmosphere;
- e) After use, please discard the mask following local regulation;
- f) The mask is only for single use, do not use repeatedly.

Storage Condition:

The product should be stored in a well ventilated, dark and dry environment. Keep away from fire, pollutants and possible pollution sources. Also, the transport storage 's temperature: -20 C ~38 C, relative humidity: <80%RH.


Shelf-Life:

The Protective Mask is valid for 3 years with the above storage condition.

Manufacturer: Zhejiang Bela Flor Protective Products Co., Ltd.

Address: No. 45, Suhua street, Suxi Town, Yiwu, Zhejiang Province, China

Website: www.belaflormask.com

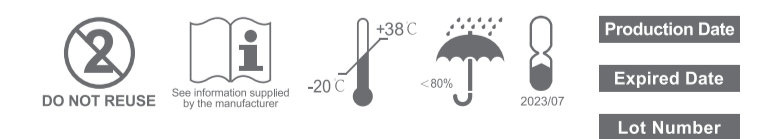

Made in China